

Setup Instruction A-tent

- 1. The tent has to be outstretched on the ground so that you can see the footprint in front of you.
 - e. g. 3 m length; 2.5 m width
- 2. Now all the 4 straps at the edges of the tent have to be anchored with pegs to the ground.
- 3. Now insert the leverage (1x ridgepole and 2 x setting up poles) into the tent.
- 4. Now the ridgepole has to be forced up with the setting up poles and has to be connected with them. After this the tent will be upright on its own.
- 5. All the ground straps have to be endued with pegs and anchored. Afterwards you have to retighten the tent once more.

Notice:

After using the tent please dry it – only pack when totally dry. With longer storage wrap the tent carefully because mice love tents.

